




Cartridge Replacement Guide for Twin and Triple Whole House/High Flow 20”

Preparation

- Shut off the main water supply.
- Release pressure by opening a downstream tap or pressing the pressure relief button on the second stage housing (if present).

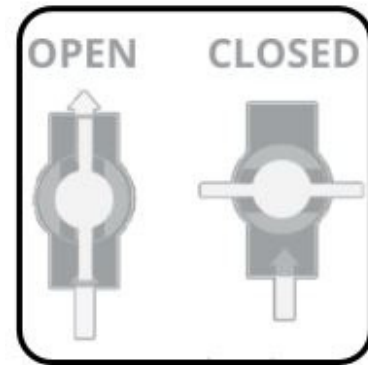

Removing Old Cartridge

- Unscrew the filter housing sump(s) using the provided wrench if necessary.
- Remove and dispose of the old cartridge(s).
- Inspect O-rings for wear; replace if damaged or every 3-5 years to ensure a watertight seal.



Cleaning and Maintenance

- Clean the housing sump(s) with mild soap and warm water, then rinse thoroughly.
- If needed, apply a thin layer of food-grade silicone lubricant to the O-ring(s).



Cartridge Replacement Guide for Twin and Triple Whole House/High Flow 20”

Installing New Cartridge

- Unwrap the new cartridge(s) and insert into the housing sump(s), ensuring proper alignment with the base spigot.
- Record the model number of the new cartridge(s) for future reference.
- Carefully screw the housing sump(s) back onto the head, aligning the cartridge(s) with the head spigot. Hand-tighten firmly, but do not over-tighten.

System Restart

- Open a downstream tap to release air.
- Slowly turn on the water supply to purge remaining air.
- Allow water to run for 2 minutes to flush the system.
- Close the downstream tap and check for leaks.

Maintenance Notes

- Flush the system for 10 minutes after 2+ days of non-use.
- Consider replacing the cartridge if the system is unused for 2 weeks or more.